


STAR THE EMPIRE STRIKES BACK WARS

LUKE SKYWALKER SNOWSPEEDER™ AUTHENTIC SCALE MODEL KIT

BOTTOM VIEW

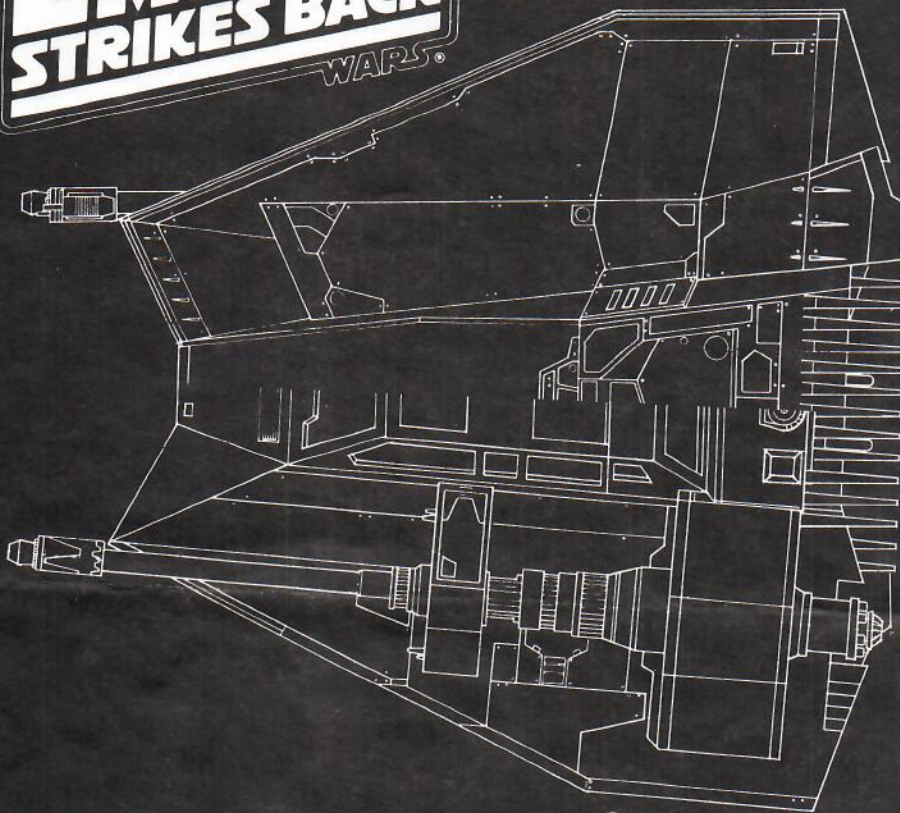

TOP VIEW

mpc
HERCUL

STOCK #8914 Form #099-891

IMPORTANT! READ THESE INSTRUCTIONS FIRST
Before you begin building your kit read the instructions completely and carefully. Study all the illustrations and the placement of each part. When assembling the kit test fit each part before cementing. It is best to cut the parts from their "runners" with a modelers knife, instead of twisting them off. Cut the parts only as they're needed. Only paint and cement for styrene plastic should be used. Be sure to trim off excess plastic or "flash". Cement should be applied to small parts with a toothpick. Each part is numbered.

© , TM & © 1980, 1989 Lucasfilm Ltd. All rights reserved. Used under authorization.

STEP NUMBERS

3


PART NUMBERS

49


CEMENT ----->

DO NOT CEMENT ----->

CLEAR PLASTIC PARTS CLEAR

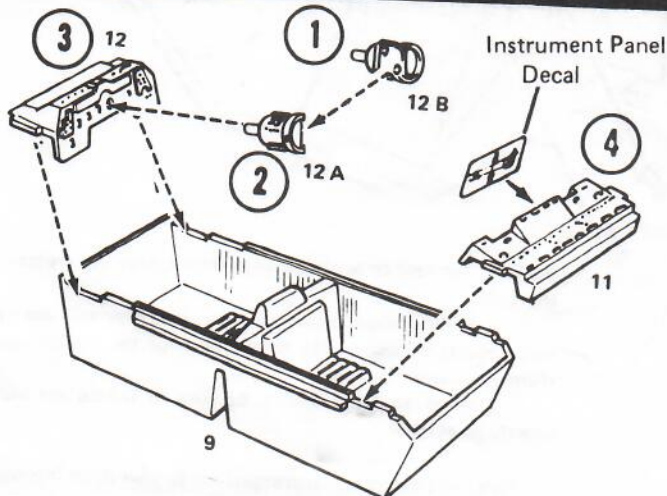

2

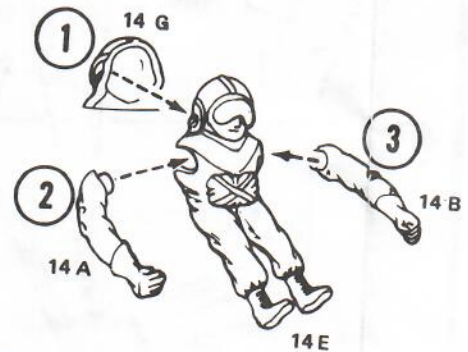


4 Repeat steps 1, 2 & 3 for second figure.

3

2

Repeat Step 1 for rear seat figure.

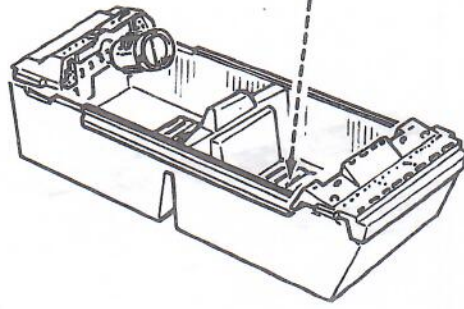

4

3

1CL



1

6 B

2

6 A

5

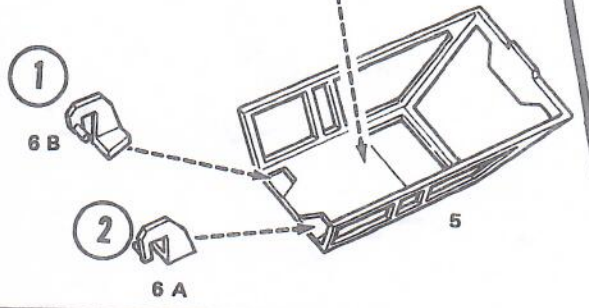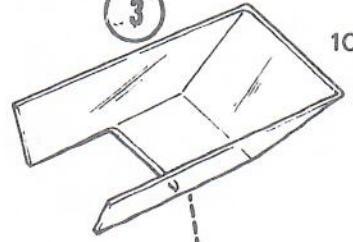

its

6

3


16

2


4

16


1

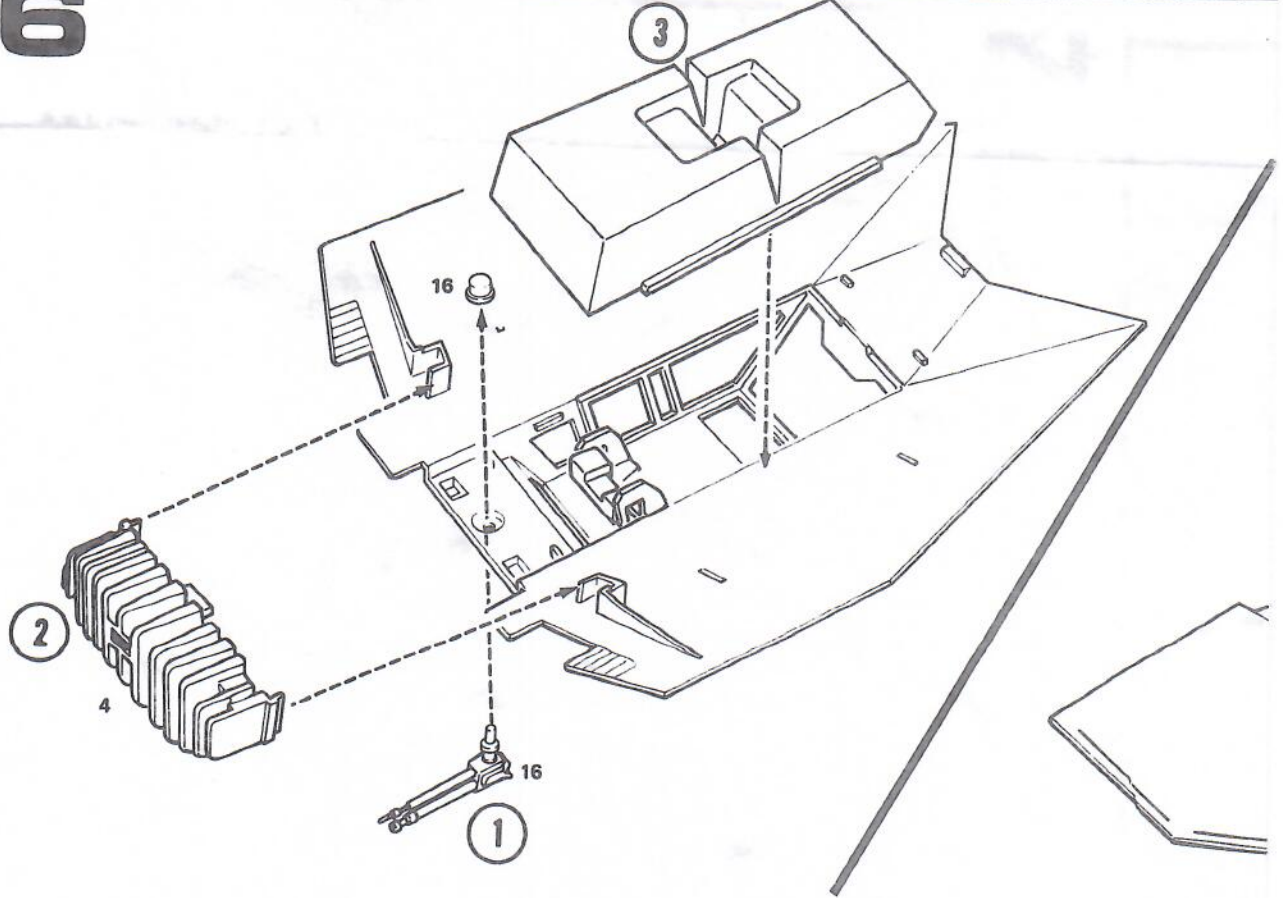


5

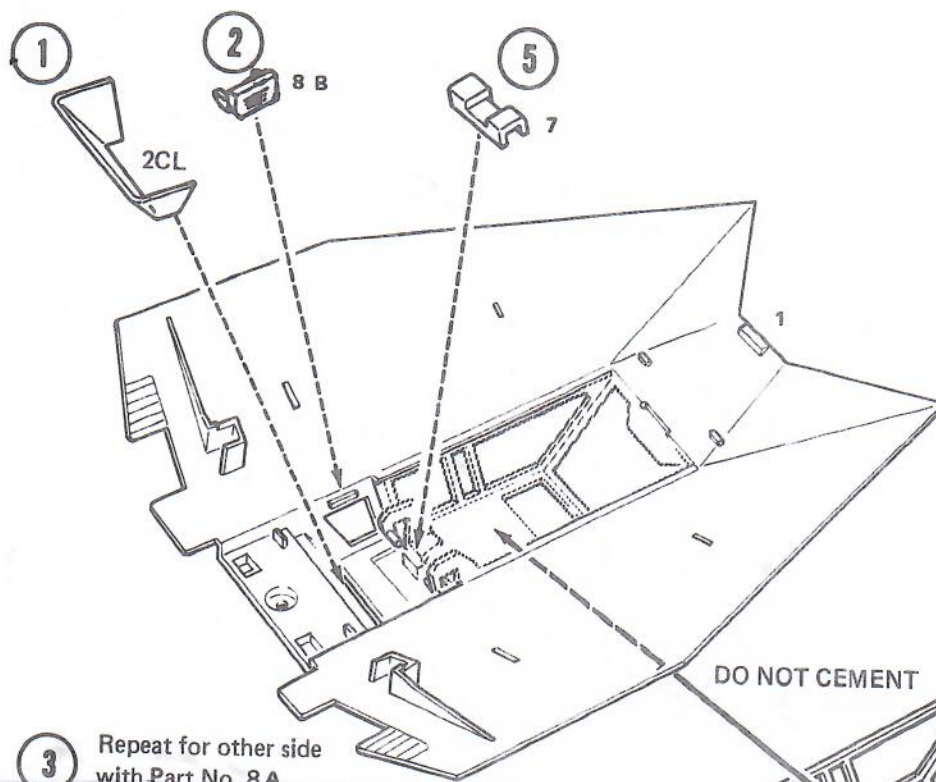


3 Repeat for other side with Part No. 8 A.

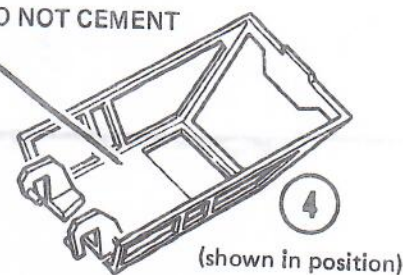

7

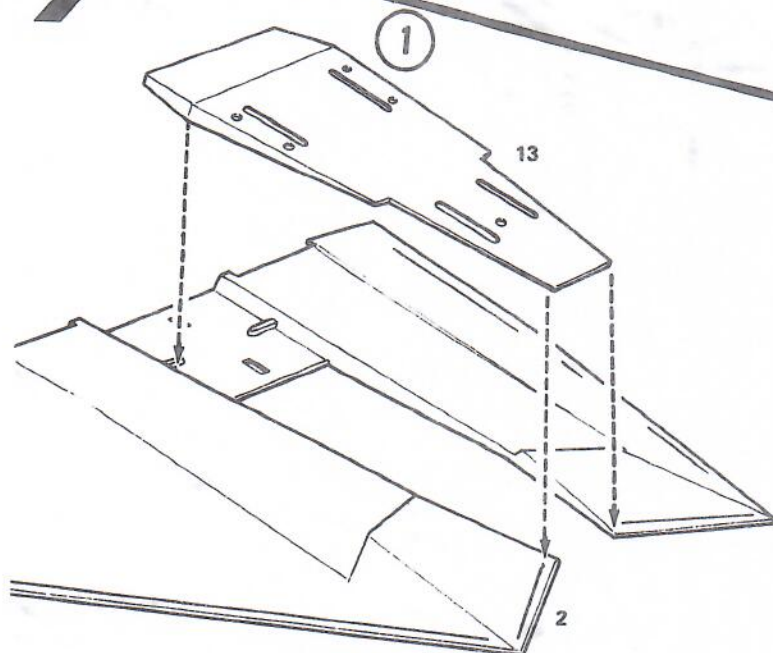

8

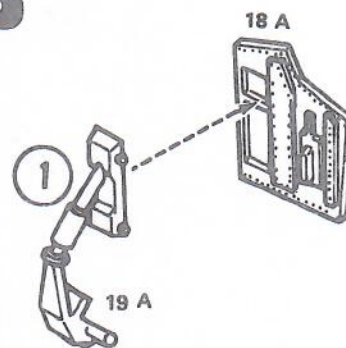

2 Repeat using Part No's. 18B & 19B.

9

DO NOT CEMENT

①

②

DO NOT CEMENT

③

IC

③

2


800

Hi

24 A

12

13

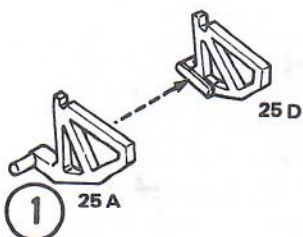

② Repeat using Part No's. 25B & 25C.

④ Repeat using Part No's. 24B & 26A.

NOTE: Pins on Part No. 25 fit into slot on bottom of Part No. 26.


③

①

②

DO NOT CEMENT

3

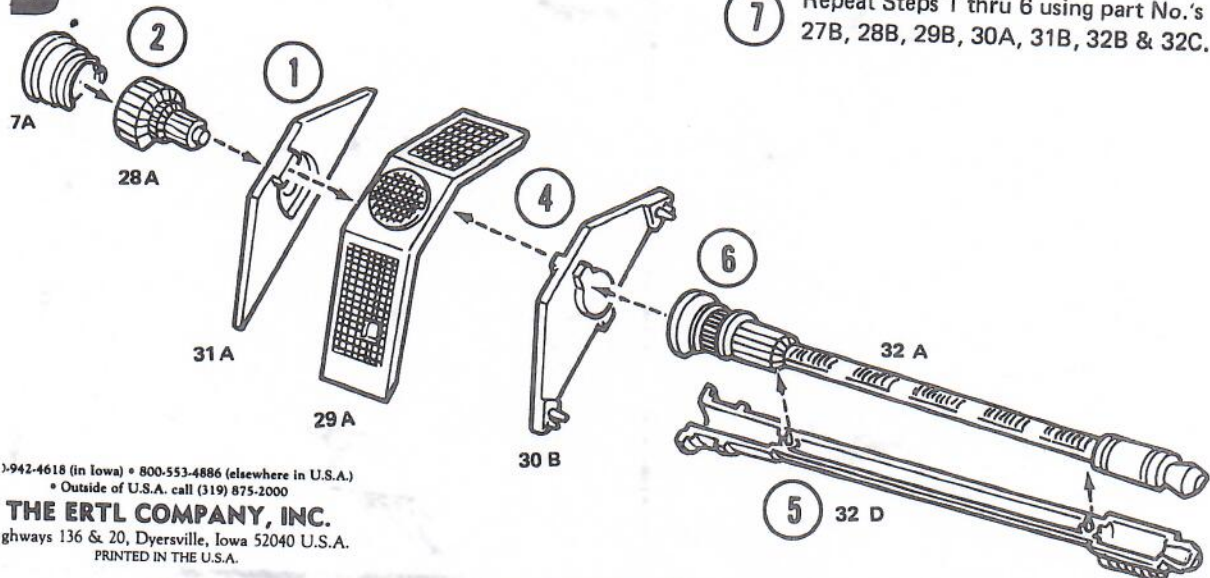


7 Repeat Steps 1 thru 6 using part No.'s 27B, 28B, 29B, 30A, 31B, 32B & 32C.

1-942-4618 (in Iowa) • 800-553-4886 (elsewhere in U.S.A.)
• Outside of U.S.A. call (319) 875-2000

THE ERTL COMPANY, INC.
Highways 136 & 20, Dyersville, Iowa 52040 U.S.A.
PRINTED IN THE U.S.A.

14

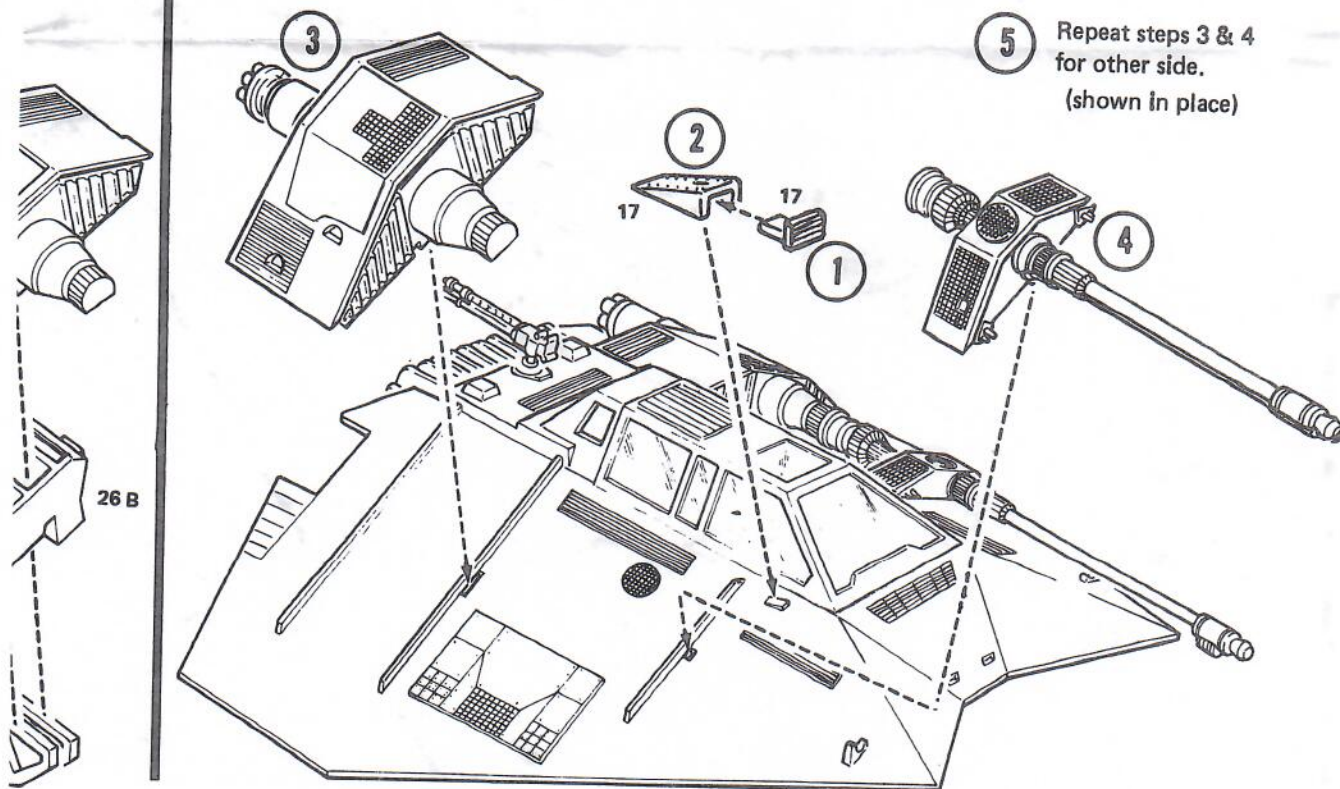

5 Repeat steps 3 & 4 for other side.
(shown in place)

1
20 A

2
22 A

21 A

23 B

3

6

Repeat Steps 1 thru 5 using Part No's. 21B,22B,23A,20B.

15

To slots on bottom of Snow Speeder.
(Cement Optional)

5

3
4CL

2

5CL


4

6 CL

3CL

1

5CL

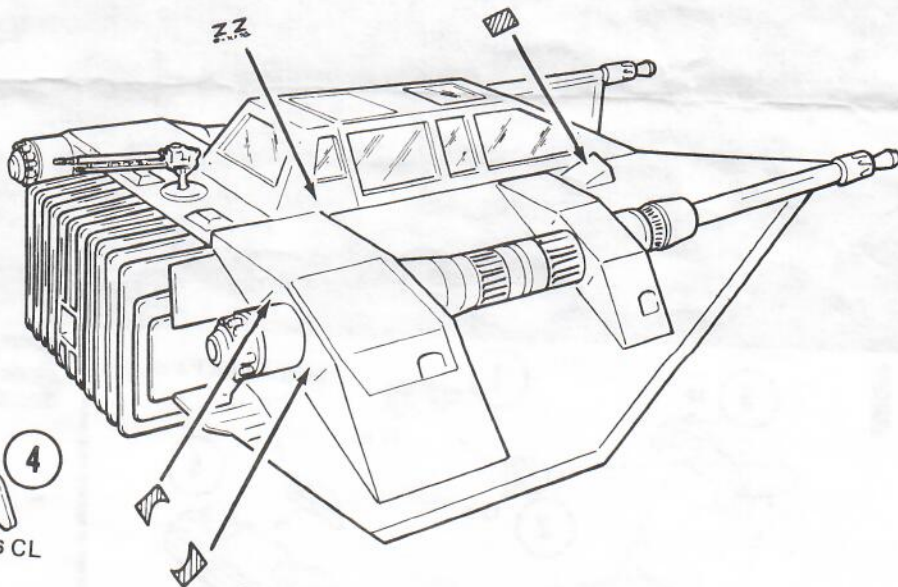

NOTE: For ease of applying your decals, they are separated on the sheet.

For the experienced modeler, you may still use a modelers knife and cut close to the image, and for the novice you can cut them apart with scissors.

When applying decals, be sure to follow the instructions exactly as written.

Refer to box cover illustrations for further decal information.